
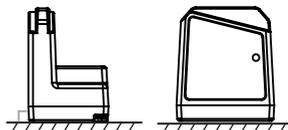


产品介绍 Introduction

FGr4S 采用 AFHDS 3 (第三代自动跳频数字系统), 内置单天线双向传输, 它的设计小巧, 便于安装。可输出标准 PPM 信号 PWM 信号和 i-BUS、S.BUS 信号。

The FGr4S uses AFHDS 3 (Third Generation Automatic Frequency Hopping Digital System). It uses a internal single antenna with two-way transmission capabilities and is designed to be compact and easy to install. It can output standard PPM, PWM, i-BUS and S.BUS.

接收机概览 Receiver overview

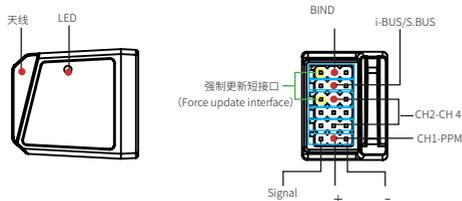

为确保信号强度, 建议安装接收机时天线保持垂直。

CH 1 - CH 4: 连接舵机、电源或其他各部件。

i-BUS/S.BUS: 输出 i-BUS/S.BUS 信号, 连接传感器和扩展模块。

BIND: 连接对码线。

To ensure a strong signal make sure that the receiver is mounted with its antenna vertical.

CH 1 - CH 4: Connects the servos, power supply or other components.

i-BUS/S.BUS: Output i.BUS/S.BUS signal, connect sensor and expansion module.

BIND: For bind cable.

产品规格 Product specification

- 通道个数: 4
- 适用机型: 车、船
- 数据输出: PPM/i-BUS/S.BUS/PWM
- 无线频率: 2.4GHz
- 发射功率: <20dBm (EU)
- RF 标准: AFHDS 3
- 天线类型: 内置天线
- 输入电源: 3.5V ~ 8.4V
- 显示方式: LED 指示
- 在线更新: 是
- 外形尺寸: 25.5*22*17.3 mm
- 机身重量: 5.1g
- 安规认证: CE, FCC ID: N4ZFGRS400

- Channels: 4
- Model Type: Car/Boat
- Data Output: PPM/i-BUS/S.BUS/PWM
- RF: 2.4GHz
- Transmission Power: <20dBm(EU)
- RF Standard: AFHDS 3
- Antenna: Built-in Antenna
- Input Power: 3.5V ~ 8.4V
- Display: LED Indicator
- Online Update: Yes
- Dimensions: 25.5*22*17.3 mm
- Weight: 5.1g
- Certification: CE, FCC ID: N4ZFGRS400

对码 Binding

1. 将对码线插入 BIND 接口;
2. 将电源线插入其他任意接口, 接收机指示灯快闪表示进入对码状态;
3. 将发射机进入对码状态; (发射机进入对码状态的方式可能不同, 请根据发射机的使用说明书进行操作)
4. 当接收机指示灯变为慢闪时, 将对码线和电源线从接收机上取下;
 - 如果发射机是双向, 则接收机指示灯无慢闪状态。
5. 将电源线重新连接至接收机, 接收机指示灯常亮表示对码成功;
6. 检查发射机、接收机、模型是否正常工作。如需重新对码, 请重复以上步骤重新对码。

1. Insert the bind cable into the receivers BIND port;
2. Plug the power cable into any other port, and the receiver's LED will start to flash indicating that it has entered bind mode.
3. Put the transmitter into bind mode; (See the transmitter's instruction manual for more information)
4. Binding is successful when the receiver's LED starts to flash slowly. Remove the power and bind cables from the receiver.
 - If the transmitter is bidirectional the receiver status indicator will not flash slowly.
5. Reconnect the power cable to the receiver.
6. Check to make sure that the transmitter and receiver are working as expected, if there are any issues or unexpected operation follow the steps above to bind again.

强制更新 Forced update

发射机在更新完后，如无法与接收机对码，需强制更新接收机。

1. 用对码线短接 BIND 和其相隔的信号脚；(接收机概览部分已经标注)
2. 接收机上电进入更新状态 (LED 灯三闪一灭)，拔掉对码线，在发射机端选择强制更新。
3. 接收机 LED 灯由 3 闪 1 灭变为慢闪，更新完成。

After the transmitter is updated, if the code cannot be matched with the receiver, it is necessary to update the receiver.

1. Short circuit bind and its separated signal pins with bind cable; (It has been signed in the Receiver overview part)
2. Power on the receiver to enter the update mode (LED light of the receiver changes from 3 flash and 1 off), unplug the bind cable, and select forced update at the transmitter.
3. The LED light of the receiver changes from 3 flash and 1 off to slow flash, the update is completed.

失控保护 Failsafe

失控保护功能用于在接收机失去信号不受控制后，接收机按设置好的失控保护值进行通道输出以保护模型及人员安全。

若发射机未设置失控保护通道值输出，接收机在进入失控保护状态后 PWM、PPM 和 i-bus out 无输出，S.BUS 保持最后输出；若发射机设置了失控保护，则按照发射机通道设置值输出。

The failsafe function is used to output the channel according to the out-of-control protection value after the receiver loses its signal and is out of control to protect the model and personnel.

- If the transmitter has not set the output of the failsafe channel value, after the receiver enters the out-of-control state, PWM, PPM, i-bus will not output, and the S.BUS will keep the last output; if the transmitter is set with the failsafe, follow the transmitter channel setting value Output.

► 注意事项:

- 使用前必须确保本产品与模型安装正确，否则可能导致模型发生严重损坏。
- 关闭时，请务必先关闭接收机电源，然后关闭发射机。如果关闭发射机电源时接收机仍然在工作，将有可能导致遥控设备失控或者引擎继续工作而引发事故。
- 确保接收机安装在远离电机，电子调速器或电子噪声过多的区域。
- 接收机天线需远离导电材料，例如金属棒和碳物质。为了避免影响正常工作，请确保接收机天线和导电材料之间至少有 1 厘米以上的距离。
- 准备过程中，请勿连接接收机电源，避免造成不必要的损失。

► Attention:

- Make sure the product is installed and calibrated correctly, failure to do so may result in serious injury.
- Make sure the receiver's battery is disconnected before turning off the transmitter, failure to do so may lead to unintended operation or loss of control.
- Make sure the receiver is mounted away from motors, electronic speed controllers or any device that emits excessive electrical noise.
- Keep the receiver's antenna at least 1cm away from conductive materials such as carbon or metal.
- Do not power on the receiver during the setup process to prevent loss of control.

认证相关 Certification**FCC Compliance Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

EU DoC Declaration

Hereby, [Flysky Technology co., Ltd] declares that the Radio Equipment [FGr4S] is in compliance with RED 2014/53/EU. The full text of the EU DoC is available at the following internet address: www.flysky-cn.com.

RF Exposure Compliance

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Environmentally friendly disposal

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.



FCC ID : N4ZFGRS400